

# IMPORTANT INSTRUCTIONS - OPERATING MANUAL

Model:  
AKEDT2



Timer Control

## READ AND SAVE THESE INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

## GENERAL SAFETY INFORMATION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to person, including the following:



1. Read all instructions before installing or using switch.
2. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
3. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-related construction.
4. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
5. This unit must be grounded.
6. **NEVER** place a switch where it can be reached from a tub or shower.

**SAVE THESE INSTRUCTIONS**

# INSTALLATION

**WARNING: INSTALLATION AND USE OF THIS EQUIPMENT SHOULD BE IN ACCORDANCE WITH PROVISIONS OF THE U.S. NATIONAL ELECTRICAL CODE, APPLICABLE LOCAL CODES, AND PERTINENT INDUSTRY STANDARDS.**

1. TURN POWER OFF at circuit breaker or fuse panel.
2. Remove wall plate and existing switch from the wall box if one is presently installed.
3. Select white or ivory overlay matching decorator style wall plate to be used. Peel protective backing, and apply overlay to front, rectangular recess of time switch. Be sure to align pushbutton and LED locations of overlay to time switch.
4. Referring to Wiring Diagram, connect the wires from the fan/light time switch to the wires in the wall box using the wire nuts provided.
5. Carefully place wires and switch into wall box, and secure with two mounting screws provided.
6. Install decorator style wall plate (not included).
7. Turn power ON at circuit breaker or fuse panel.

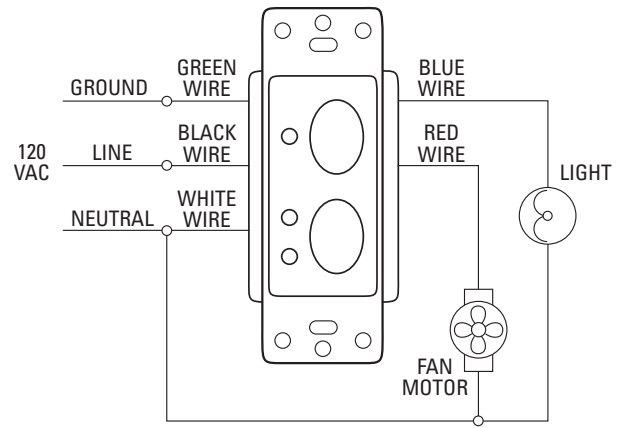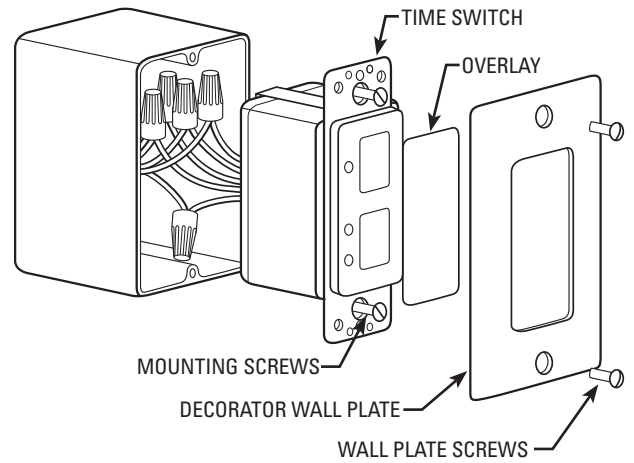

# OPERATION

1. The "SWITCH LOCATOR" LED is intended to remain ON to assist finding the switch in a darkened room.
2. Press the top "ON/OFF" switch once to turn the fan and light ON.
3. Press the top "ON/OFF" switch again to turn the light OFF. NOTE: the fan will remain ON for the selected time delay (factory default setting is 20 minutes).
4. When the time delay is completed, the fan will automatically shut OFF.
5. Press the bottom "TIME DELAY SELECTION SWITCH" to cycle the fan time delay to 20, 40, or 60 minutes. The corresponding LEDs will light indicating the selected time period. NOTE: both "TIME DELAY" LEDs indicate a 60 minute time period.

