



SPECIFICATIONS  
**SENSOR  
 CONTROLS**  
 ACCESSORIES

## Occupancy and Vacancy Controls

- Dimensions**

2"L x 1-13/16"W x 4-1/8"H


- Control Type**

**AKOSW** - White, occupancy sensor automatically turns the fan on when the room is occupied and continues to run for up to 30 minutes after the room is vacated. Wall plate is included.

**AKOSI** - Ivory, occupancy sensor automatically turns the fan on when the room is occupied and continues to run for up to 30 minutes after the room is vacated. Wall plate is included.

**AKVSW** - White, vacancy sensor is manually turned on with the push button power switch then automatically turns the fan off after 30 minutes once the room is no longer occupied. Wall plate is included. *California Title 24 compliant.*

**AKVSI** - Ivory, vacancy sensor is manually turned on with the push button power switch then automatically turns the fan off after 30 minutes once the room is no longer occupied. Wall plate is included. *California Title 24 compliant.*

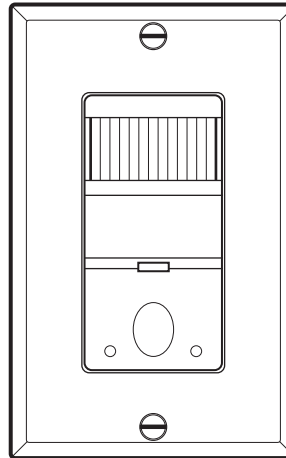

*Models AKOSW, AKOSI*

- Ratings**

*Rated for Fluorescent lights*

Rated for motors up to 1/4 HP

Rated for lighting up to 800 watts

- Installations/Voltage**

Single gang box, 120V


- Shipping Info**

**AKOSW** - UPC: 0-83162-90088-3  
 Weight: .34 lbs.

**AKOSI** - UPC: 0-83162-90089-0  
 Weight: .34 lbs.

**AKVSW** - UPC: 0-83162-90090-6  
 Weight: .34 lbs.

**AKSVI** - UPC: 0-83162-90091-3  
 Weight: .34 lbs.

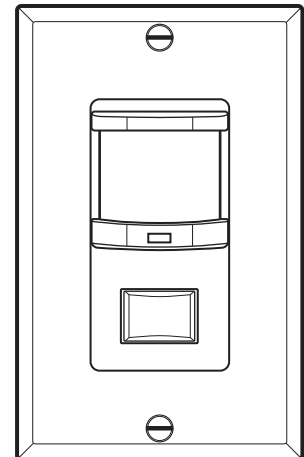

*Models AKVSW, AKVSI*

<b>PROJECT</b>							<b>ARCHITECT</b>			
<b>LOCATION</b>							<b>ENGINEER</b>			
<b>CONTRACTOR</b>							<b>SUBMITTED BY</b>			<b>DATE</b>
FAN NUMBER	MODEL NUMBER	CFM	IN W.C.	RPM	WATTS	AMPS	SONES	QTY	OPTIONAL EQUIPMENT & REMARKS	



**U.S.:** 820 Lincoln Avenue  
 West Chester, Pennsylvania 19380-4466  
 Phone: (610) 692-7400 • 877-304-3785  
 Fax: (610) 696-8048

**Canada:** 8 Edvac Drive  
 Brampton, Ontario L6S 5P2  
 Phone: (905) 456-2033 • 800-250-8767  
 Fax: (905) 456-1015